



Operating Instructions (EN)

MODELS:

Sport


20"-26" Disk 25" Cylindrical 20", 24" & 28" EDGE


Carbon

26"-28" Disk 25"-29" Cylindrical 24"-28" EDGE

Hero

30", 32" & 34" Disk 29"-33" Cylindrical 28"-32" EDGE

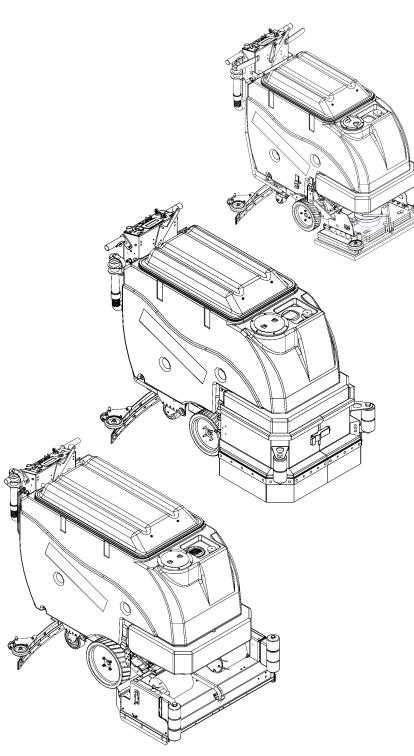

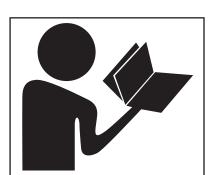

Read these Instructions before using the machine.



Read these Safety Messages before using the machine.

www.tomcatequip.com 1711 South Street Racine, WI 53404 (USA) (800) 450-9824 | (+001) 262-681-6470 © 2023 RPS Corporation

INTRODUCTION


This manual is furnished with each new machine. This manual will allow the Operator to get the best performance out of your RPS manufactured Scrubber-Drier, Sweeper, Burnisher, or Orbital Scrubber. Read this manual thoroughly before operating or servicing the machine.

This machine will provide excellent performance, but the best results will be obtained at the most minimum costs if:

- The machine is regularly maintained per the Authorized Local Distributor.
- The machine is operated with reasonable care and caution.
- The machine is maintained with manufacturer supplied parts.

LOCATE SERIAL NUMBER

The serial number of your machine is located on the lower half of the control panel of the machine.

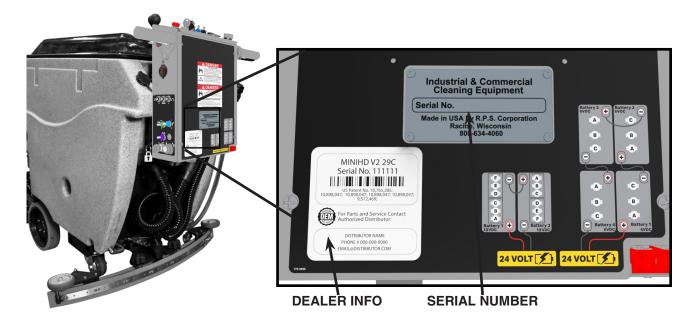

AS OUR POLICY IS ONE OF CONSTANT IMPROVEMENT - ALL INFORMATION AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

TABLE OF CONTENTS



Introduction2	Charge Batteries 30	J
Locate Serial Number2	Battery Chargers31	1
Table Of Contents	PM Sheet	2
Safety Messages	Military grade central command - status light codes34	4
Safety Labels6	Touch Screen Error Codes	5
Central command Dashboard controls	Military grade schematic	8
Central Command Side Panel Controls	touch screen schematics	9
Touch Screen (Optional)		
Touch Screen Symbols (Optional)10	Round Disk Brushes: 42	
Touch Screen Zone Operation (Optional)1	Round Disk Pads: 42 Cylindrical Brushes: 42	
Touch Screen Zone Programming (Optional)12	EDGE Pads and Screens: 42	2
Battery Setup13	v2 Squeegee Blade Kits & Complete Squeegee	3
Install Squeegee14	Assemblies: 43	
Adjust Squeegee15	CARBON Common Wear Parts44	4
Remove From Battery Charger16	Round Disk Brushes: 44 Round Disk Pads: 44	
Transportation - Forward17	Cylindrical Brushes:44	4
Transportation - Reverse18	EDGE Pads and Screens: 44 EDGE Grip Face: 45	
Fill Solution Tank19	v2 Squeegee Blade Kits & Complete Squeegee Assemblies: 45	5
Operation - Scrubbing20	Hero Common Wear Parts46	
Draining Recovery Tank2	Round Disk Brushes:46	6
Draining Solution Tank22	Round Disk Pads:	
Flushing Recovery Tank23	EDGE Pads and Screens:46	6
Clean Drain Saver2	EDGE Grip Face: 47 v2 Squeegee Blade Kits 47	
Clean Cylindrical Hopper25	MACHINE DECALS48	8
Clean Vac Box System20	3	
Remove Disk Brushes27		
Remove Cylindrical Brushes28	3	
Remove EDGE Pads29		



You will see four kinds of safety reminders in this manual:

▲ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

ACAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury or damage to this machine or nearby objects. CAUTION also can be used to alert against unsafe practices.

A WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE

NOTICE indicates information considered important, but not hazard-related. This safety message may be related to property damage or warranty warnings.

Your safety, and that of others, is very important. Operating this machine safely is an important responsibility.

DO NOT OPERATE THIS MACHINE:

- Unless you are trained and authorized to do so by your RPS Authorized Local Distributor
- Unless you have read and understood this Operator's Manual
- On surfaces with greater than a 2% grade unless this machine is equipped with a functional parking brake
- On surfaces with greater than an 8% grade at any time
- On Loading Docks

WHEN OPERATING THIS MACHINE:

- Remove loose objects from the floor that could be projected from the rotating Brushes
- Keep your hands and feet away from the rotating Brushes
- Do not operate this machine where flammable liquids, vapors, or dust are present
- Use caution when maneuvering

BEFORE LEAVING THE MACHINE:

- Drain "clean" Solution & "dirty" Recovery solution into APPROVED drains
- Park the machine on a level surface
- Turn the machine off & remove key

BEFORE SERVICING THE MACHINE:

- Disconnect the Batteries
- Drain both tanks

ADANGER

Explosive hydrogen gas forms when Batteries are charging. An open flame or spark can cause this gas to explode. Serious personal injury or property damage could occur. Only charge the Batteries in this machine in a well ventilated area.

ADANGER

Flammable materials can cause an explosion or fire. Do not use flammable materials in Tank or pick up.

A WARNING

The Batteries in this machine produce hazardous voltage which can cause electrical shock, burns and/ or electrocution. Always disconnect Batteries before servicing this machine.

A WARNING

When climbing or descending ramps, always drive machine forward. To avoid overturning the machine, Do not back down ramps. Do not drive across inclines. Do not turn while ascending or descending ramps. Overturning the machine can cause serious injury or death.

A WARNING

Do not use water that exceeds 135°F / 57°C. If water is above said temperature, this will void the Tank Warranty.

A WARNING

Do not park this machine on ramps or slopes. Always park this machine on a level, hard surface. Do not operate this machine outdoors or on uneven surfaces.

▲ WARNING

The Batteries in this machine contain sulfuric acid, which causes burns to skin. If battery acid contacts clothing or skin, rinse the effected area with cold water immediately. If battery acid gets on your face or in your eyes, flush the area immediately with cold water and seek medical attention.

AWARNING

To avoid electrical shock, do not operate this machine over electrical floor outlets.

ACAUTION

To avoid damage to this machine, use only cleaning solutions and replacement parts recommended by the manufacturer.

ACAUTION

Do not operate this machine if any parts have been damaged or removed.

A WARNING

Dress safely. Do not wear rings or metal wrist watches when servicing this machine, as they can cause an electrical short circuit which can cause serious burns.

A WARNING

Do not remove, paint over or destroy warning decals. If warning decals become damaged, call 1-262-681-3583 for free replacements.

AWARNING

Dress safely. Do not wear a neck tie, scarf, or any loose or dangling clothing while operating this machine. Loose or dangling clothing or neck-wear can tangle in rotating parts, causing serious injury or death.

A WARNING

Always turn off this machine before leaving it unattended. Do not allow untrained persons to operate this machine.

A WARNING

NO RIDERS. Do not carry passengers on this machine. Do not use this machine as a stepladder or work platform.

A WARNING

Understand the dynamic braking system before you operate the machine on ramps. Machine may coast.

A WARNING

Before you service a Battery, always wear face protection, protective gloves and protective clothing. Battery acid or battery explosion can cause serious injuries.

ACAUTION

Always use the automatic battery charger provided by the manufacturer of this machine to charge the Batteries of this machine. It is designed to charge the Batteries at the appropriate rate. If you must use a different charger, disconnect the Batteries before charging to avoid damage to the electronic speed controller.

ACAUTION


To avoid damage to the electronic control components of this machine, Do not store this machine outdoors. Do not pressure wash this machine.






Read and obey all Safety Labels on your Floor Scrubber. If you have questions about these labels, ask your supervisor.


These images indicate where on the Floor Scrubber the Safety Labels are located. If ever the labels become illegible, worn off, or torn, promptly report it to your supervisor and replace it.

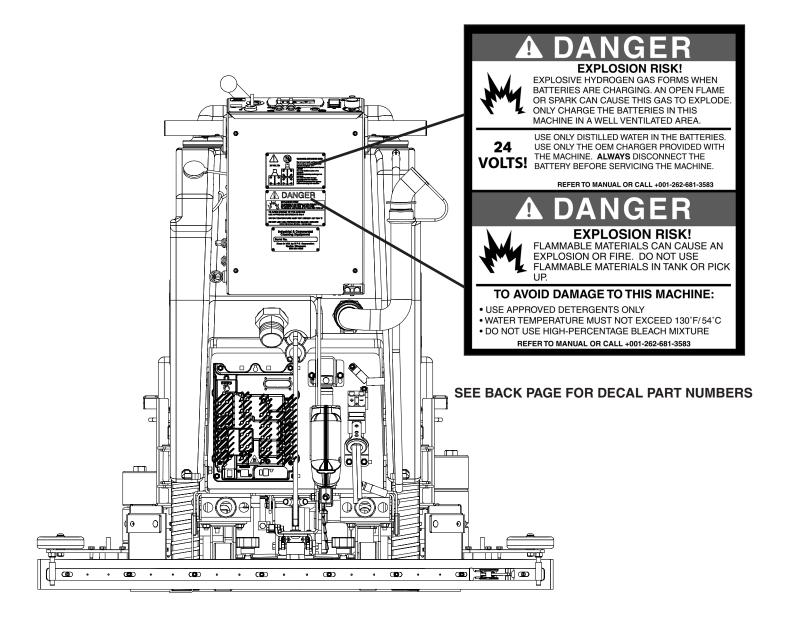


CENTRAL COMMAND DASHBOARD CONTROLS (MILITARY, TOUCH SCREEN)

- 1. Squeegee Lever
- 2. Reverse Switch
- 3. Drive Switch (Both Handles)
- 4. E-Stop
- 5. Key Switch
- 6. Vac Clog Light
- 7. ZERO3 Light
- 8. Speed Potentiometer
- 9. Vac Switch
- 10. Solution Switch
- 11. Scrubdeck Switch
- 12. Down pressure Switch
- 13. Military Flow Lever
- 14. Military Status Light
- 15. Military Battery Gauge / Hour Meter Combo
- 16. Military Down Pressure Gauge

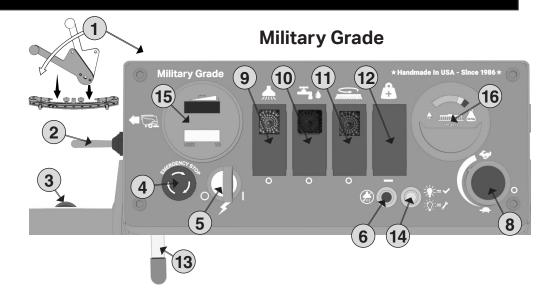


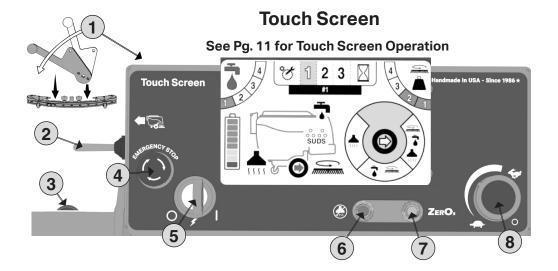

CENTRAL COMMAND SIDE PANEL CONTROLS

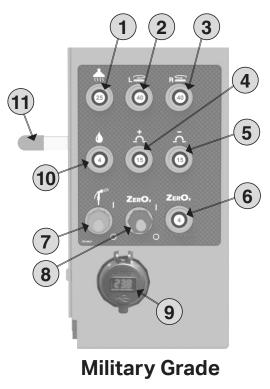



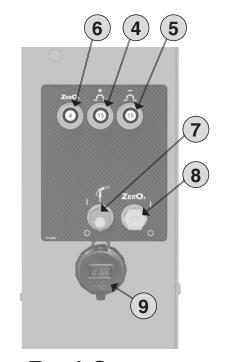

Touch Screen




- 1. Vac Circuit Breaker
- 2. Left Brush Circuit Breaker
- 3. Right Brush Circuit Breaker
- 4. Positive BUSS Circuit Breaker
- 5. Negative BUSS Circuit Breaker
- 6. ZERO3 Circuit Breaker
- 7. Spray Jet On (I) / Off (O)
- 8. ZERO3 On (I) / Off (O)
- 9. Dual USB Voltmeter
- 10. Solution Valve Circuit Breaker

11. Military Solution Control Lever

TOUCH SCREEN (OPTIONAL)



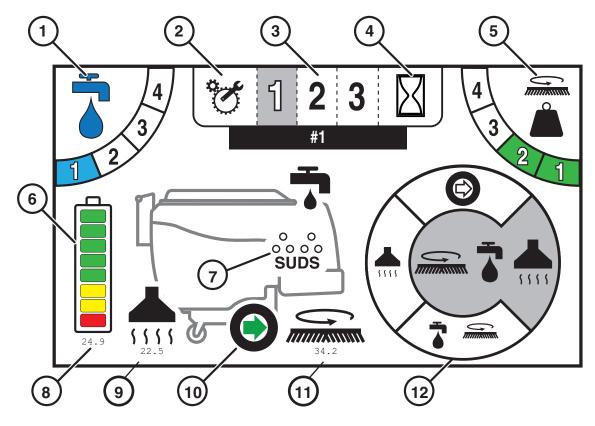


- 1. **SOLUTION OUTPUT** Indicates the level of solution that is being dispensed when in operation, (0 = off, 1 = Low, 4 = High).
- 2. TECHNICAL / MANAGER SETUP Access 'Error Code History' and Manager Programming
- 3. PROGRAMMED ZONES Switch between preset solution and downpressure settings for varying applications
- 4. HOUR METERS Displays all of the hour meters of the machine: Key Switch, Transport, Scrub Motors, and Vacuum Motor
- 5. DOWN PRESSURE OUTPUT Indicates the level of downpressure that is being applied to the floor surface (1 = low, 4 = high).
- 6. BATTERY GAUGE Indicates the level of battery charge available and volt meter
- 7. SUDS (Onboard Chemical Dilution) indicator
- 8. ACTIVE VOLT & AMP DRAW Indicates the live DC Volts (under battery gauge) and Amp draw (under systems) when machine is running
- 9. AMP VAC CURRENT Indicates Vac power consumption
- 10. TRANSPORT INDICATION Green Forward & Red Rev
- 11. BRUSH DISK CURRENT Indicates Brush power consumption
- 12. OPERATION MODE SELECTOR Cycle through and select which operation mode you would like to work in



TOUCH SCREEN SYMBOLS (OPTIONAL)


Mode Selection

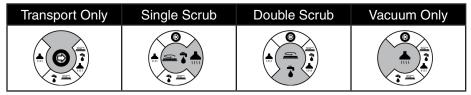

Solution Setting



Down Pressure Setting

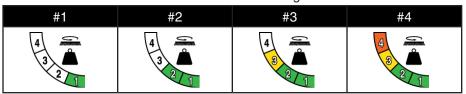

Forward Transport Motor

Reverse Transport Motor



Solution Flow

Active	Inactive	Working
7	<u>.</u>	1000

Vacuum Motor

Working	Active	Inactive
555555	1111	1111

Suds

250:1 Dilution	125:1 Dilution	Inactive
0 0 0 0 0 0 SUDS	o o SUDS	0 0 0 0 0 0 SUDS

Scrub Deck Motor(s)

Working	Active	Inactive




Working



Hour Meters




Zone Lock

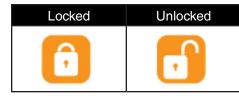

TOUCH SCREEN ZONE OPERATION (OPTIONAL)



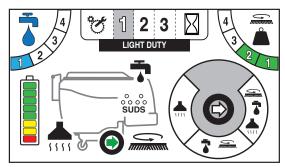

The touch screen is designed to be programmed to three specific zones. Each zone can be named and custom programmed or even disabled if not needed.

The zone you are working in is highlighted as indication. In Figure 1. the zone selected is Light Duty.

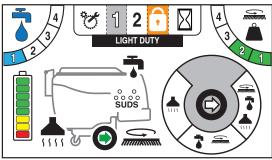


Figure 2. shows Zone 3 "locked out" by the indicator lock icon.

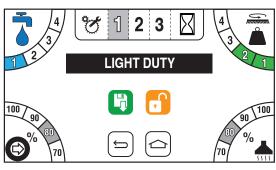


Figure 3. shows Zone 1 "Light Duty" Factory Configuration.

Water = 1

Downpressure = 2

Drive Speed = 70%

Vac Motor = 80%

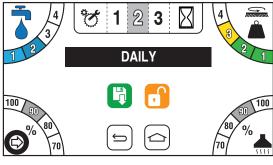


Figure 3. shows Zone 2 "Daily" Factory Configuration.

Water = 2

Downpressure = 3

Drive Speed = 90%

Vac Motor = 90%



Figure 3. shows Zone 3 "Heavy Duty" Factory Configuration.

Water = 3


Downpressure = 4

Drive Speed = 100%

Vac Motor = 100%




TOUCH SCREEN ZONE PROGRAMMING (OPTIONAL)

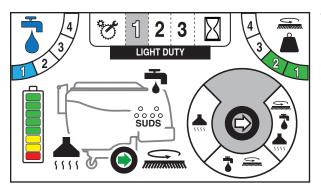


To program the 3 Zones, press



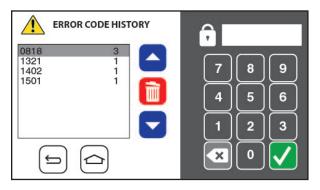

From here you will be prompted with a passcode screen. Enter the manager passcode 349 to get access to setup.

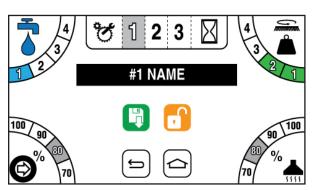

Once you have entered the password, you will see the Figure 3. screen where you can alter the name, solution output, down-pressure setting, scrubbing speed, and vacuum power.

Alternatively you can lock the Zone out from this screen, to prohibit operator use.

Once any of the 3 "Zones" is locked the remaining zones are no longer adjustable either by the operator.





To alter the name of a Zone, simply click on the black name box and a full keyboard will appear as Figure 4. shows. Enter new name and save your work with the Green save icon.

BATTERY SETUP






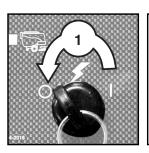

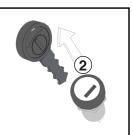





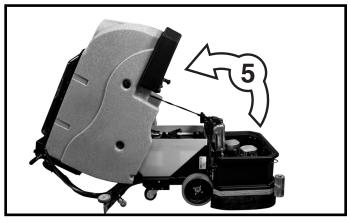


C В B C A lacktriangleC D B B C Α C Battery 1 6VDC Battery 4 6VDC 24 VOLT 24 VOLT [1

NOTICE

Batteries are a possible environmental hazard. Consult your Battery supplier for safe disposal methods.

NOTICE

Orientation of Batteries is critical for cables to reach. Ensure proper torque values when installing batteries. (Between 8 - 12 ft/lbs)

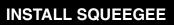












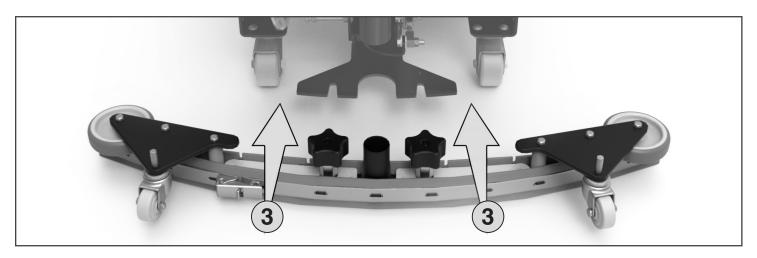

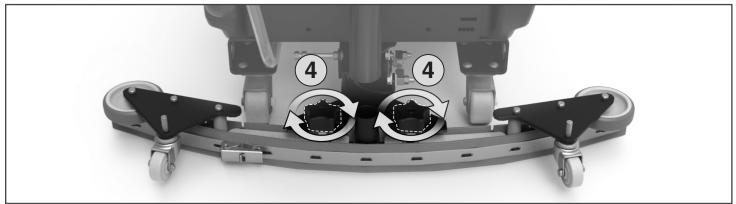

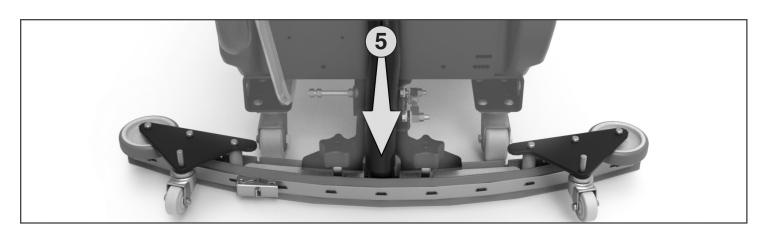

ADJUST SQUEEGEE


















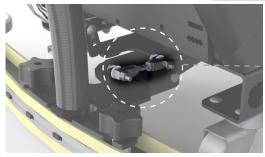


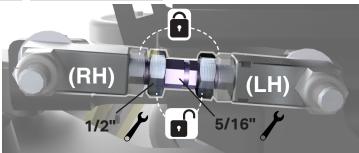


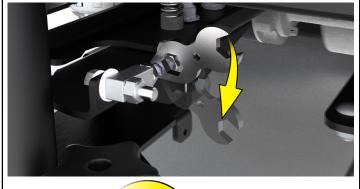

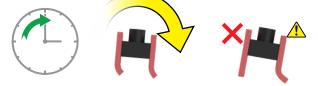

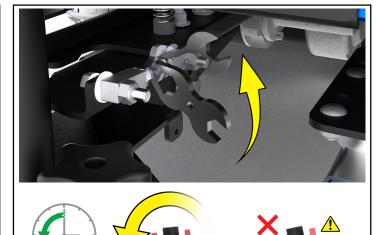


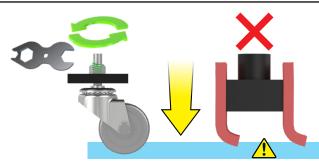

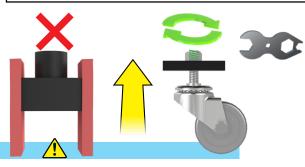







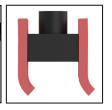






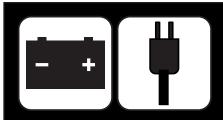

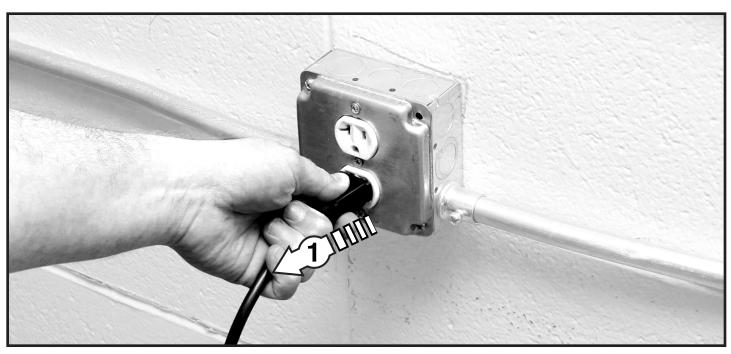




Please refer to OEM Charger Operating Instructions for more information.

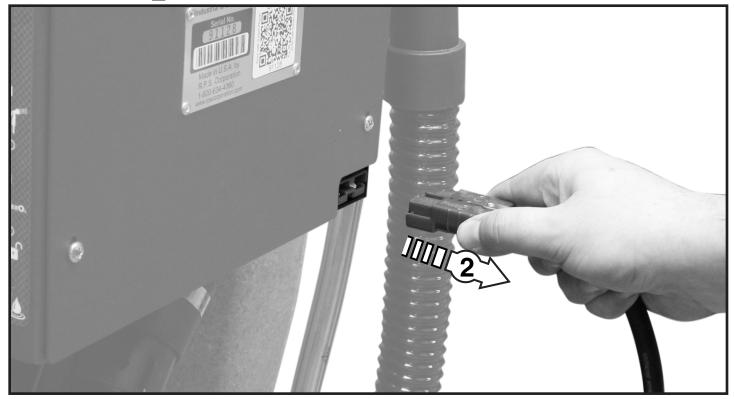

TRANSPORTATION - FORWARD



Military Grade

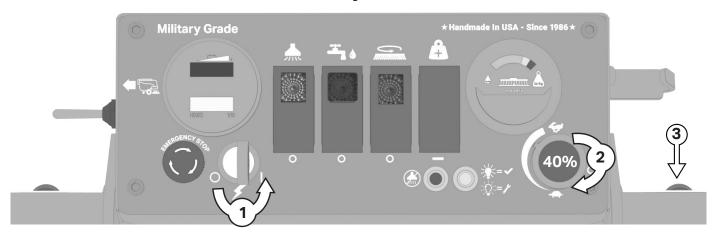


Touch Screen To






Military Grade

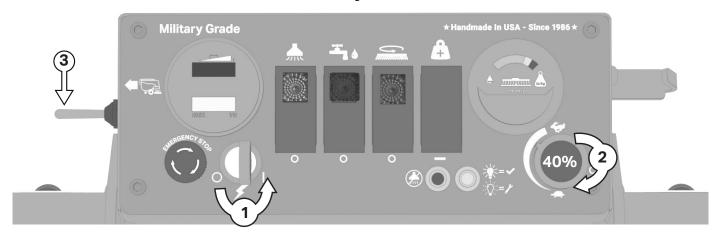

Touch Screen Touch Screen Handmade In USA - Since 1986 * Touch Screen Touch Screen


FILL SOLUTION TANK



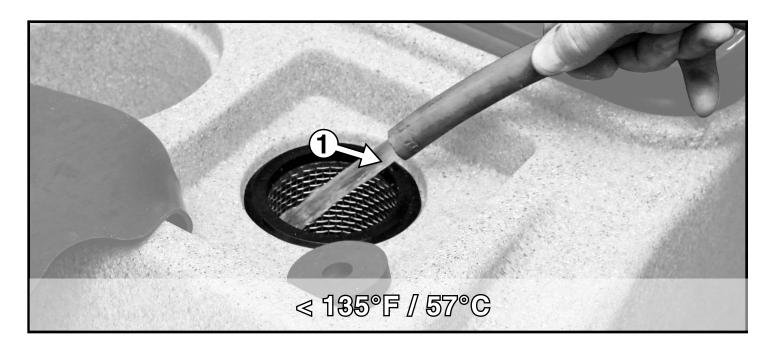

ADANGER

EXPLOSION RISK! Flammable materials can cause an explosion or fire. Do NOT use flammable materials in Tank or pick up.

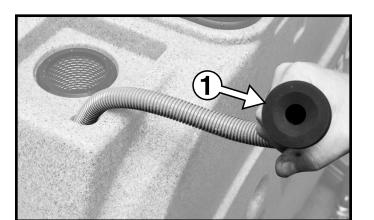


ACAUTION


TO AVOID DAMAGE TO THIS MACHINE:


- Use APPROVED detergents only
- Water temperature must not exceed 135°F/57°C
- Do NOT use high-percentage Bleach mixture



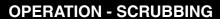



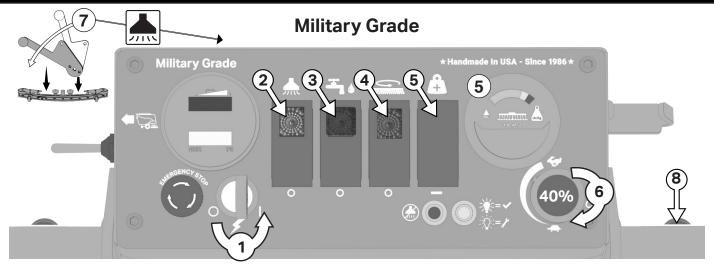


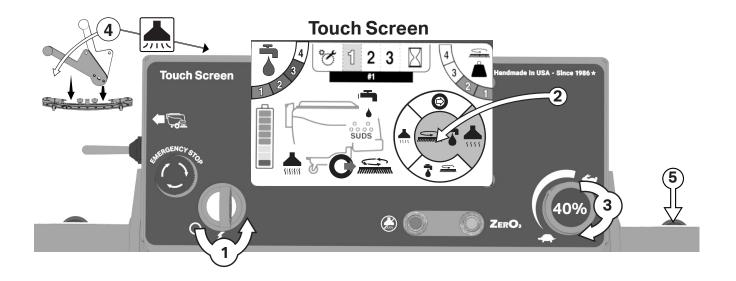


DRAINING RECOVERY TANK






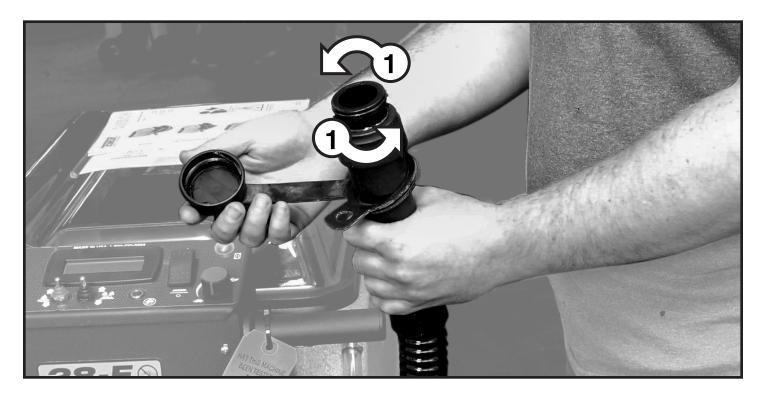


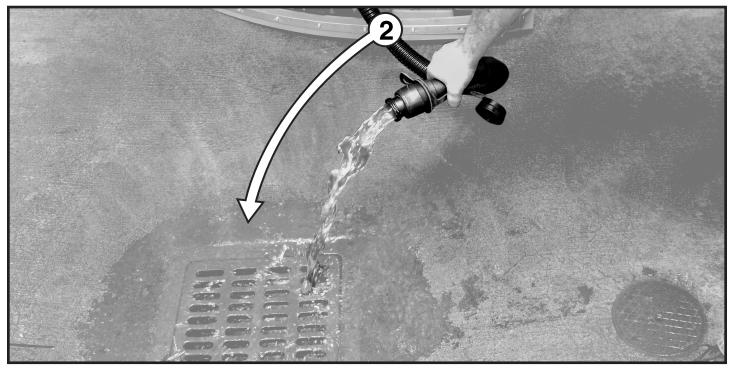





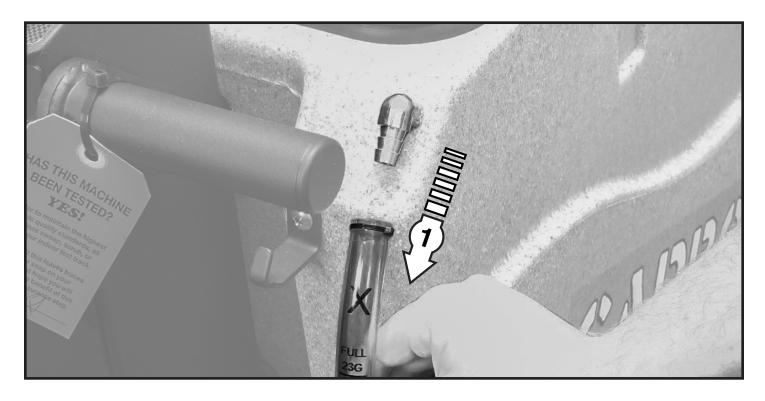


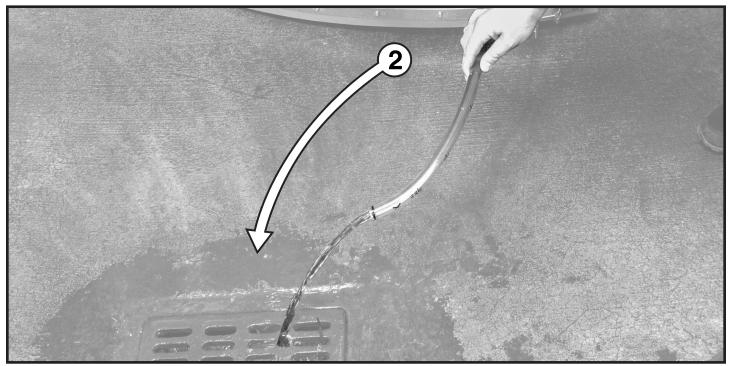

FLUSHING RECOVERY TANK






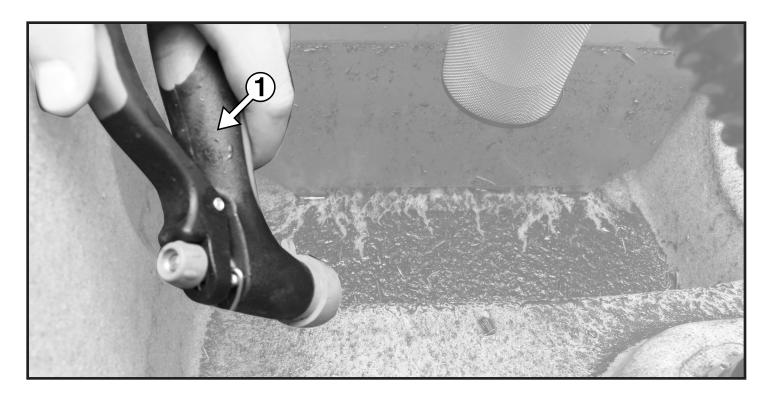









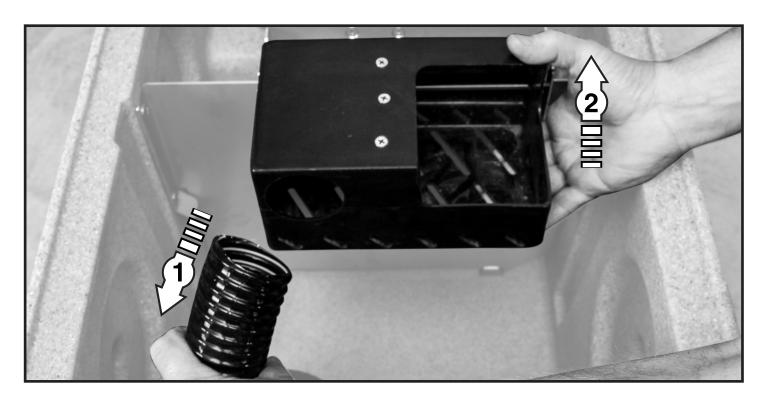


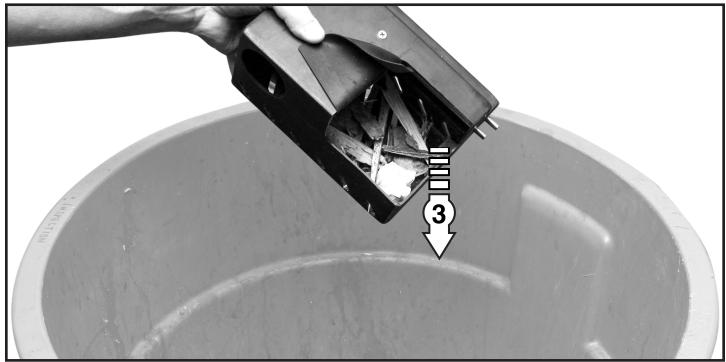

CLEAN CYLINDRICAL HOPPER




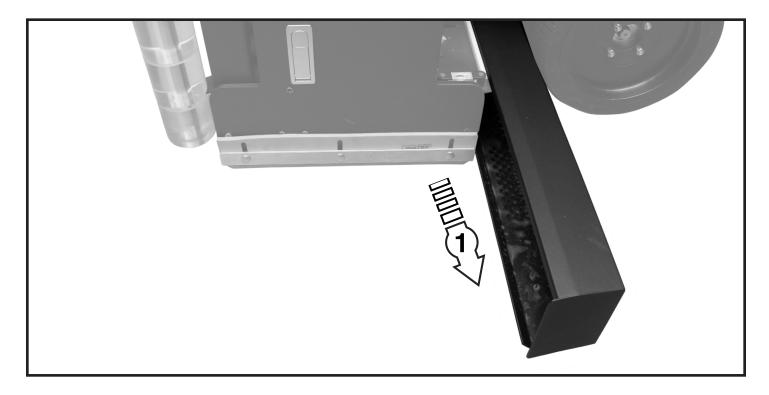


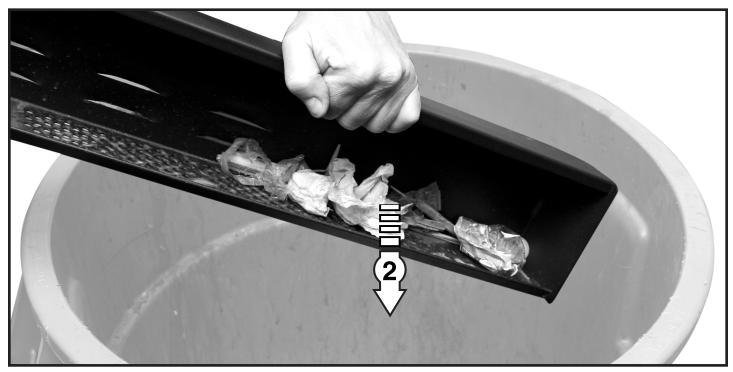







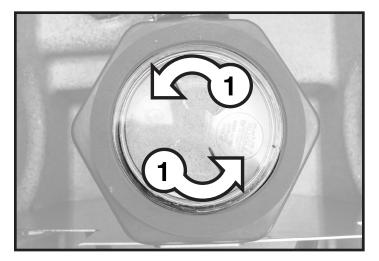


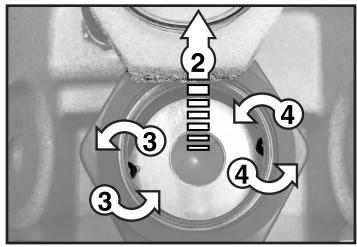

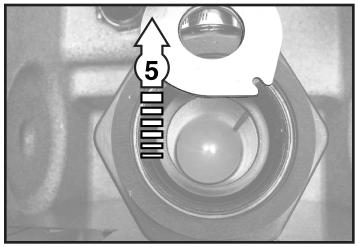

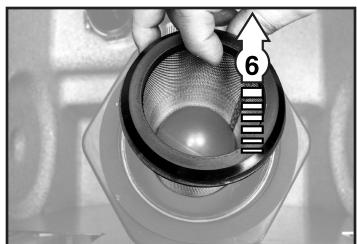





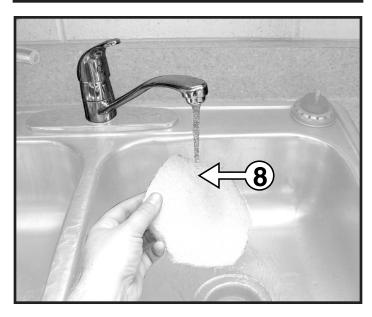


REMOVE DISK BRUSHES




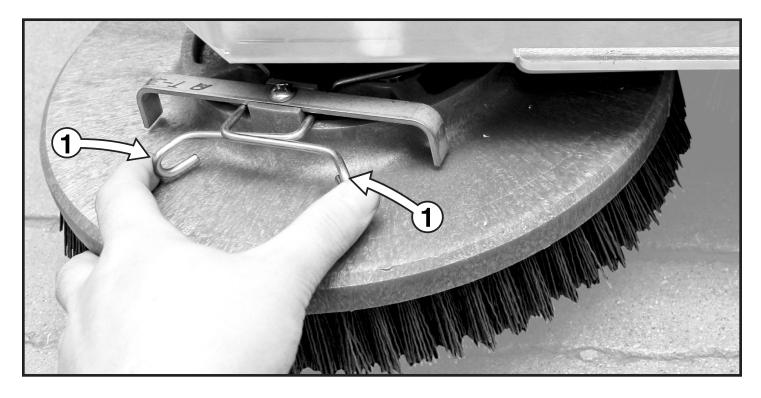


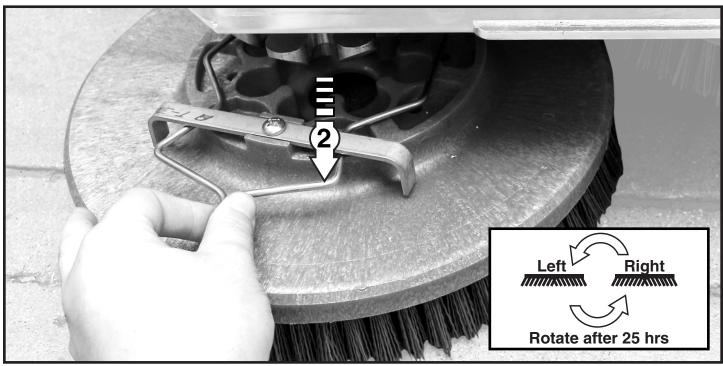



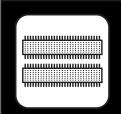


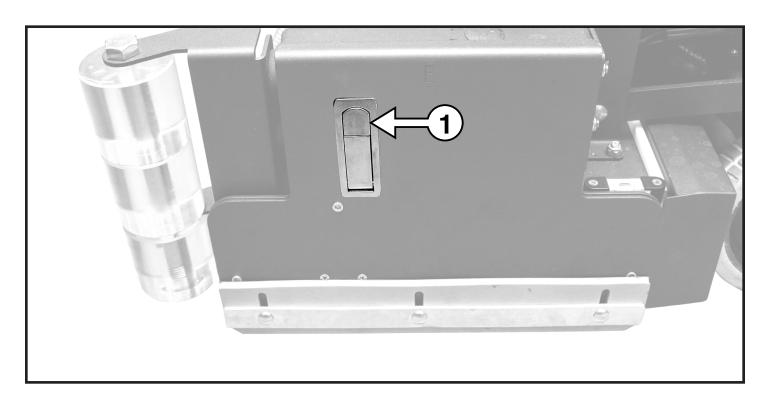


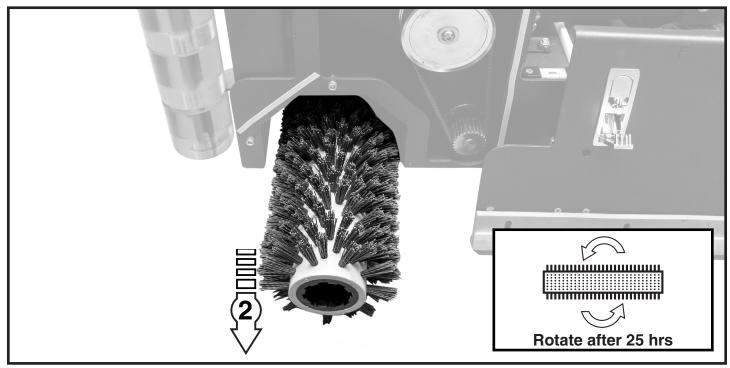



REMOVE EDGE PADS



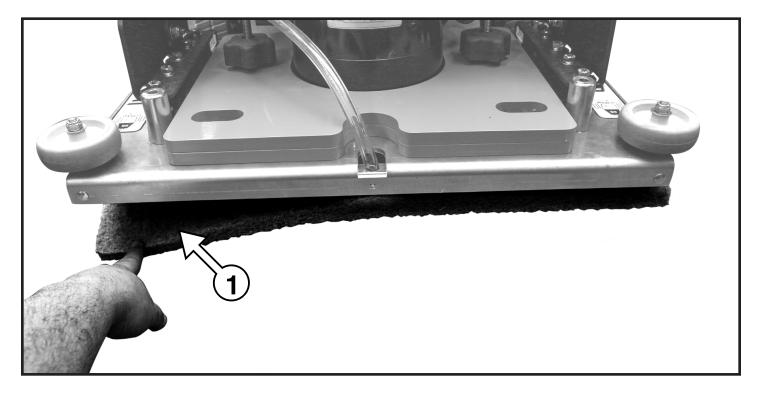


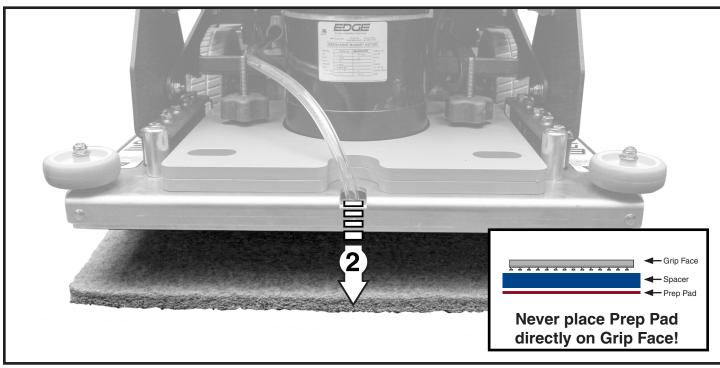

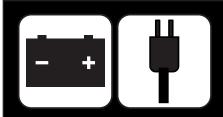


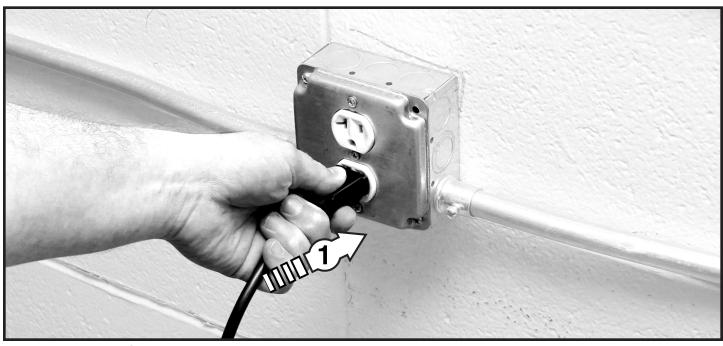

Please refer to OEM Charger Operating Instructions for more information.

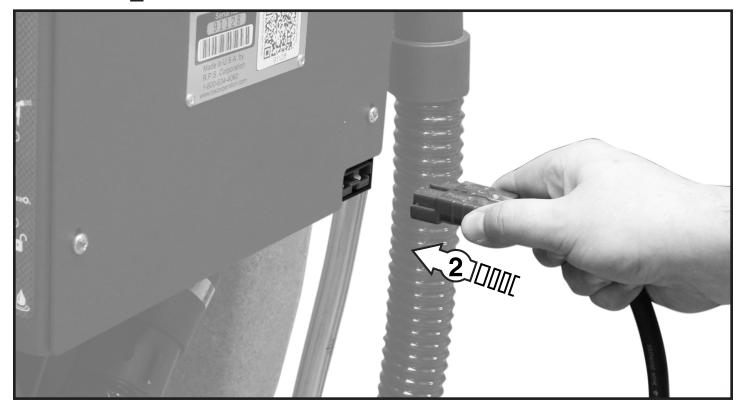

BATTERY CHARGERS

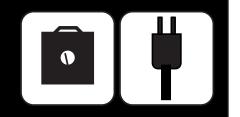

Console / WET / Domestic Chargers:






AC Power IN: 120VAC / 60Hz

DC Power OUT: Sport: 24VDC / 12A Carbon: 24VDC / 25A Hero: 24VDC / 30A



Please refer to OEM Charger Operating Instructions for more information.

Onboard / AGM / International Chargers:

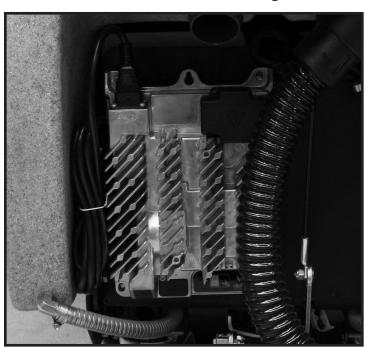



AC Power: 80-270VAC / 50-60Hz **DC Power OUT:** 24VDC / 27A

Please refer to OEM Charger Operating Instructions for more information.



		Email: Phone:	
		Phone:	
		Thoric.	
State:	Zip:	Contact:	
Model #:		Work Order #:	

CHECK OPERATION & CONDITION OF	IN SPEC	REPAIR	PROBLEM
Key Switch			
Battery Gauge			
Deck Up / Down – Brush Switch			
Brush Pressure +/- Toggle (Optional)			
Vacuum Switch - ON / OFF			
Squeegee Lever - Up/Down			
Solution Switch - ON/OFF			
Solution Flow Lever +/-			
Green Drive Buttons - L & R			
Reverse Toggle Switch			
E-Stop (Optional)			

$\label{eq:NOTE:Drain} \textbf{NOTE: Drain Solution \& Recovery Tank fully. Rinse out Recovery Tank}$

CLEAN & INSPECT – SOLUTION TANK	IN SPEC	REPAIR	PROBLEM
Solution Fill Screen - Mesh			
Solution Fill Hose (Optional)			
Solution Inline Filter			
Vacuum Muffler Drain Hose			
Battery Drain Hose			

BRUSH CONDITION – SCRUB DECK			
Deck Curtains/Wipers	Good	Worn	Needs Replacement
Brush Sockets: (2-Disk)/(4-Cylindrical)	Good	Worn	Needs Replacement
Brush Drivers: (2-Disk)/(4-Cylindrical)	Good	Worn	Needs Replacement
Scrub Brush Fiber Length	Brush 1 Length:	Brush 2 Length:	Rotated Brushes: Y / N

CLEAN & INSPECT – SCRUB DECK	IN SPEC	REPAIR	PROBLEM	
Scrub Deck Linkage Pivot Points				
Scrub Deck Lift Actuator				
Scrub Deck Level (Orbital Only)				
Scrub Motor Wires				

CLEAN & INSPECT - SQUEEGEE	IN SPEC	REPAIR	PROBLEM	
Remove and Wipe off Squeegee				
Check and Rotate Blades as Needed				
Caster Wheels and Height				
Pitch Adjust				
Check Pivot and Knobs				
Squeegee Vac Hose				

CLEAN & INSPECT – RECOVERY TANK	IN SPEC	REPAIR	PROBLEM
Recovery Tank Lid & Gasket			
Vacuum Float Ball Screen			
Vacuum Box White Filter			
solution Site Tube			

CLEAN & INSPECT – DRIVE	IN SPEC	REPAIR	PROBLEM
Drive Wheels & Casters Condition			
Grease Caster Swivel			

PM SHEET

#1	HYDROMETER READING	WATER ((Circle		WATER (Circle		-
Cell A	(Clear	Dark	Overfilled	ОК	Low
Cell B	(Clear	Dark	Overfilled	ОК	Low
Cell C	(Clear	Dark	Overfilled	ОК	Low
Cell D/2A	(Clear	Dark	Overfilled	ОК	Low
Cell E/2B	(Clear	Dark	Overfilled	ОК	Low
Cell F/2C	(Clear	Dark	Overfilled	ОК	Low
	IYDROMETER \ READING	WATER (
Cell A	(Clear	Dark	Overfilled	ОК	Low
Cell B	(Clear	Dark	Overfilled	ОК	Low
Cell C	(Clear	Dark	Overfilled	ОК	Low
Cell D/4A	(Clear	Dark	Overfilled	ОК	Low
Cell E/4B	(Clear	Dark	Overfilled	ОК	Low
Cell F/4C	(Clear	Dark	Overfilled	ОК	Low
CLEAN & INSPEC	ECT - BATTERIES		IN SPEC			REPAIR
Battery Termina					_	
Battery Cables Torque Battery						


OPERATE & CONFIRM	IN SPEC	REPAIR	PROBLEM
Fill Solution Tank – ¾ Full			
Scrub & Dry			
Fine Tune Squeegee Adjustments			

COMMENTS & RECOMMENDATIONS		
Servicing Distributor:		
Technician's Name:	Date:	Signature:
Customer's Name:	Date:	Signature:

MILITARY GRADE CENTRAL COMMAND - STATUS LIGHT CODES

Status Light Guide


Below is a list of self-help actions. Try to use this list before you contact your service agent. Go to the number in the list which matches the number of indicator light flashes and follow the instructions.

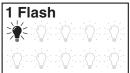


The battery needs charging, there is a bad connection to the battery or dependent on programming, may indicate that the battery lockout function is active and the controller is in a restricted mode of operation. Check the connections to the battery. If the connections are good, try charging the battery.




There is a bad connection to the motor. Check all connections between the motor and the controller.

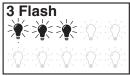


The motor has a short circuit to a battery connection. Contact your service agent.

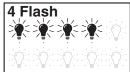


The battery charge level has fallen below the Battery Lockout Level and the controller is inhibiting certain machine functions. Charge the battery.

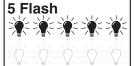


Not Used.

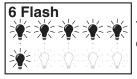


The controller is being inhibited from driving, this may be because the battery charger is connected.

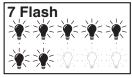


A throttle fault is indicated. Make sure that the throttle is in the rest position before switching on the machine.

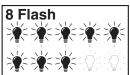

A controller fault is indicated. Make sure that all connections are secure.

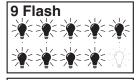

The parking brakes have a bad connection. Check the parking brake and motor connections. Make sure the controller connections are secure.

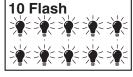

An excessive voltage has been applied to the controller. This is usually caused by a poor battery connection. Check the battery connections.

TOUCH SCREEN ERROR CODES

Error	Internal Label	Code	Туре	Description	Action	Remedy
Vacuum motor current over software limit	VACUUM_SOFTWARE_OV	49	soft	The vacuum motor current has exceed the software limit	The vacuum motor is disabled	
Squeegee motor current over hardware limit	SQUEE_HARDWARE_OV	50	soft	The squeegee motor current has exceed the absolute hardware limit	The squeegee actuator is disabled	
	VALVE_FAULT	51				
Open circuit detected in vacuum motor	VACUUM_OPEN_CIRCUIT	52	soft	An electrically open condition has been detected in the vacuum motor circuit	The vacuum motor is disabled	
	TRACT_RIGHT_NULL_ERROR	53				
	TRACTION_OPEN_CIRCUIT	54				
Open circuit detected in deck actuator	BRUSH_DECK_OPEN_CIRCUIT	55	soft	An electrically open condition has been detected in the deck actuator circuit	Brush, deck actuator and water/suds are disabled	
	TRAIL_TIME_OUT	56				
	SOLENOID_WELDED_OTHER	57				
	SOLENOID_CLOSE_LIM- IT_WARNING	58				
Squeegee motor stalled	SQUEE_STALLED_MOTOR	59	soft	An energized squeegee actuator is not moving	The squeegee actuator is disabled	
Deck actuator stalled	BRU_DECK_STALLED_MOTOR	60	soft	An energized deck actuator is not rotating	Brush, deck actuator and water/suds are disabled	
	PRECHARGE_FAILURE_OTHER	61				
Brush motor stalled	BRUSH_STALLED_MOTOR	62	soft	An energized brush motor is not rotating	Brush, deck actuator and water/suds are disabled	
vacuum motor stalled	VACUUM_STALLED_MOTOR	63	soft	An energized vacuum motor is not rotating	The vacuum motor is disabled	
	LEFT_CURRENT_LIMIT	64				
	RIGHT_CURRENT_LIMIT	65				
Overheat MOSFET	THERMAL_CUTBACK_MOS	66	hard	The transport motor drive circuit has had an over temperature failure	The machine is disabled	
Battery over voltage	HIGH_BATTERY_PROTECT	67	hard	The battery voltage is above acceptable limits	The machine is disabled	check batteries / wiring

TOUCH SCREEN ERROR CODES


Error	Internal Label	Code	Туре	Description	Action	Remedy
	HARD_FAULT	0		Flag used to define a show-stop- per failure requiring a power cycle		
	SOFT_FAULT	1		Flag used to define an error that may disable a device but keep the rest of the machine operational		
	NO_ERROR	0		Used internally		
Bad Personality	BAD_PERSONALITY	10	hard/soft	Incompatable options programmed or a checksum failure	The machine is disabled or continues operating with factory default parameters	Check programming options and/or reprogram EEPROM
Initial throttle fault	INITIAL_THROTTLE_FAULT	11	soft	Throttle is engaged at power up preventing a successful return to idle state	Machine remains in a pre-idle condition until the active throttle condition goes away	Take your foot off the gas
	SHORT_CIRCUIT	12	hard			
Memory fault	EEPROM_READ_ERROR	13	hard/soft	An error was detected during an EEPROM read access	The machine is disabled or continues operating with factory default parameters	Cycle keyswitch. If problem persists change control board
Dead battery	LOW_BATTERY_PROTECT	14	hard	The battery voltage has dropped below NN.n Volts	The machine is disabled	Charge or replace batteries
Low battery charge	LOW_BATTERY_CHARGE	15	soft	The battery voltage has dropped below NN.n Volts and all but the transport motor have been disabled	All but the transport motor are disabled is disabled	Charge battery
Overheat CPU	THERMAL_CUTBACK_MCU	16	hard	The microcontroller hardware has had an over temperature failure	The controller is switched off	Keyswitch off, wait ten minutes, keyswitch on. If problem persists change control board
	PRECHARGE_FAILURE_TRA	17				
Transport idle current fault	TRACT_LEFT_NULL_ERROR	18	hard	An abnormally high idle current has been detected in the trans- port motor (operational motor)	The machine is disabled	
Brush idle current fault	BRUSH_NULL_ERROR	19	soft	An abnormally high idle current has been detected in the brush motor (operational motor)	Brush, deck actuator and water/suds are disabled	
Vacuum idle current fault	VACUUM_NULL_ERROR	20	soft	An abnormally high idle current has been detected in the vacuum motor (operational motor)	Vacuum motor is disabled	
Squeegee idle current fault	SQUEEGEE_NULL_ERROR	21	soft	An abnormally high idle current has been detected in the squee- gee motor (operational motor)	Squeegee motor is disabled	
	BRU_ADJ_OUT_OF_RANGE	22	soft			
Transport motor relay not open	SOLENOID_WELDED_TRA	23	hard	The main traction relay was detected closed during power on	The machine is disabled	Keyswitch off, wait ten seconds, keyswitch on. If problem persists change control board
Transport motor relay not closed	SOLENOID_DIDNT_CLOSE_TRA	24	hard	The main traction relay was de- tected open after being energized during power on	The machine is disabled	
Throttle fault	THROTTLE_FAULT	25	hard	An illegal voltage has been read from the throttle feedback circuit	The machine is disabled	Check throttle action and voltages

TOUCH SCREEN ERROR CODES

Error	Internal Label	Code	Туре	Description	Action	Remedy
Brake fault	BRAKE_FAULT	26	hard	An illegal voltage has been read from the brake feedback circuit	The machine is disabled	
Alarm fault	ALARM_FAULT	27	soft			
Auxilliary output 1 fault	AUX_1_FAULT	28	soft			
Auxilliary output 2 fault	AUX_2_FAULT	29	soft			
Auxilliary output 3 fault	AUX_3_FAULT	68	soft			
Deck actuator idle current over limit	BRU_DECK_NULL_ERROR	30	soft	An abnormally high idle current has been detected in the deck actuator motor	Brush, deck actuator and water/suds are disabled	
Transport motor stalled	TRACTION_STALLED_MOTOR	31	hard	An energized transport motor is not rotating		
Transport motor circuit current over limit	LEFT_DRAIN_OV	32	hard	There is excessive current in the transport motor drive circuit		
Transport motor circuit current over limit	RIGHT_DRAIN_OV	33	hard	There is excessive current in the transport motor drive circuit	The machine is disabled	
Brush motor current over software limit	BRUSH_SOFTWARE_OV	34	soft	The brush motor current has exceed the software limit	Brush, deck actuator and water/suds are disabled	
Brush motor current over hardware limit	BRUSH_HARDWARE_OV	35	soft	The brush motor current has exceed the absolute hardware limit	Brush, deck actuator and water/suds are disabled	
Open circuit detected in brush motor	BRUSH_OPEN_CIRCUIT	36	soft	An electrically open condition has been detected in the brush motor circuit	Brush, deck actuator and water/suds are disabled	
	REGEN_CURRENT_EXCEEDED	37				
	LEFT_DRAIN_FAULT	38				
	RIGHT_DRAIN_FAULT	39				
Transport motor current over hardware limit	LEFT_SOFTWARE_OV	40	hard	The transport motor current has exceed the absolute hardware limit	The machine is disabled	
Transport motor current over hardware limit	RIGHT_SOFTWARE_OV	41	hard	The transport motor current has exceed the absolute hardware limit	The machine is disabled	
	BRUSH_DRAIN_FAULT	42				
12VDC power supply outside acceptable limits	SUPPLY_OUT_OF_RANGE	43	hard	The 12VDC supply voltage is less tha 11.75V or greater than 12.25 volts	The machine is disabled	check batteries
	VALVE_OPEN_CIRCUIT	44				
Deck actuator motor cur- rent over software limit	BRU_DECK_SOFTWARE_OV	45	soft	The deck actuator current has exceed the software limit	Brush, deck actuator and water/suds are disabled	
Vacuum motor current over hardware limit	VACUUM_HARDWARE_OV	46	soft	The vacuum motor current has exceed the software limit	The vacuum motor is disabled	
Deck actuator motor current over hardware limit	BRU_DECK_HARDWARE_OV	47	soft	The deck actuator current has exceed the absolute hardware limit	Brush, deck actuator and water/suds are disabled	
Squeegee motor current over software limit	SQUEE_SOFTWARE_OV	48	soft	The squeegee motor current has exceed the software limit	The squeegee actuator is disabled	


MILITARY GRADE SCHEMATIC



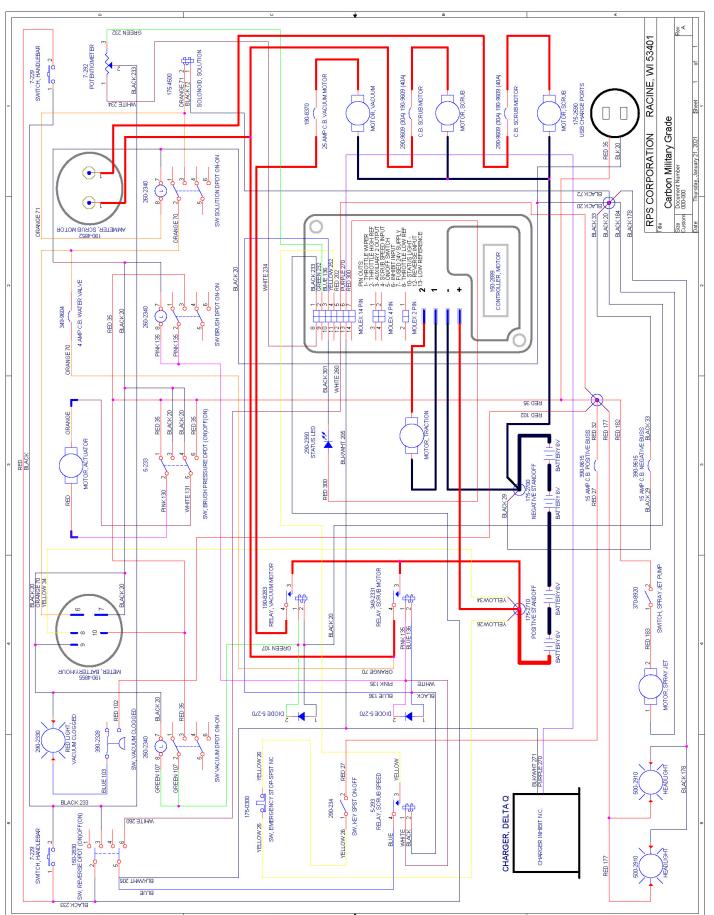

TOUCH SCREEN SCHEMATICS



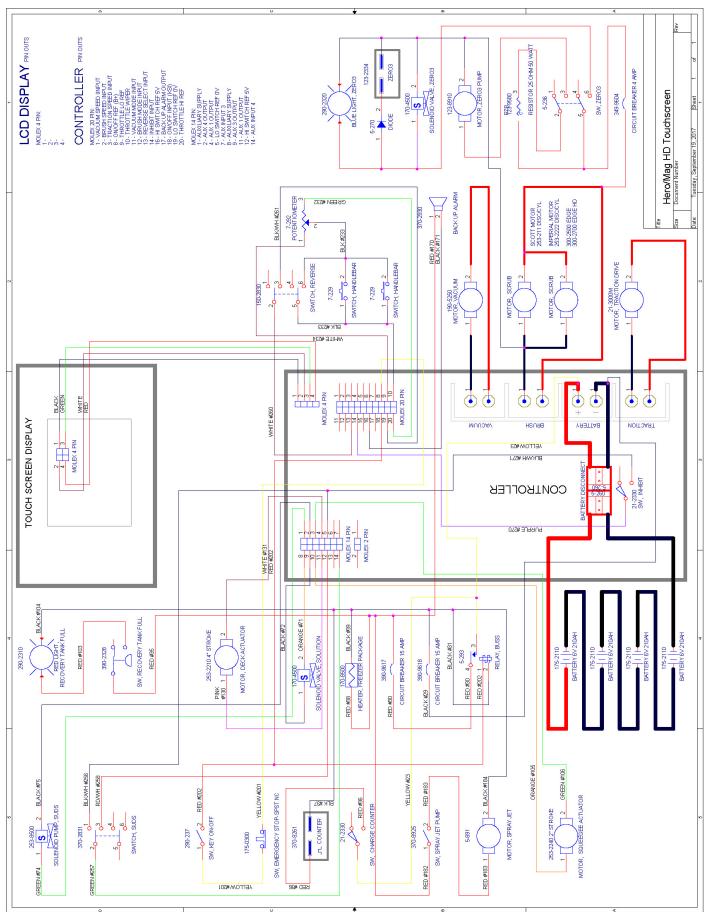







ROUND DISK BRUSHES:

NOTICE

The ## in Disk Column Denotes Desk Pad Size: 13" or 20"

BRUSHES	DISK	LEVEL
Super Grit	##-382SS	Very High
Tough Grit	##-382S	High
Midi Grit	##-382C	Medium
Light Grit	##-382PS	Moderate
Poly	##-382P	Light
Nylon	##-382N	Light
Tampico	##-382T	Light
Pad Driver	##-382D	
Diamond Driver	##-382DD	

ROUND DISK PADS:

NOTICE

The ## in Disk Column Denotes Desk Pad Size: 13" or 20"

DISK PADS	DISK	LEVEL	COLOR
Super Black	##-422BB	Very High	Black
Black	##-422B	High	Black
Brown	##-422BR	High	Brown
Green	##-422G	Medium	Green
Blue	##-422BL	Moderate	Blue
Red	##-422R	Moderate	Red
White	##-422W	Light	White

CYLINDRICAL BRUSHES:

BRUSHES	MODEL 25" CYLINDRICAL	LEVEL
Tough Grit	236-697S	High
Midi Grit	236-697C	Medium
Light Grit	236-697PS	Moderate
Nylon	236-697N	Light
Tampico	236-697T	Light

EDGE PADS AND SCREENS:

DESCRIPTION	24"×14" SCRUBDECK	20"×14" SCRUBDECK	28"×14" SCRUBDECK
White Pad	N/A	EDGE-4005	EDGE-4054
Red Pad	EDGE-2404	EDGE-4004	EDGE-4053
Blue Pad	EDGE-2403	EDGE-4003	EDGE-4052
Green Pad	EDGE-2402	EDGE-4002	EDGE-4051
Black Pad	EDGE-2401	EDGE-4001	EDGE-4050
White Driver Pad	N/A	EDGE-4025	EDGE-4058
Tile/Grout Renovator Pad	N/A	EDGE-4018	EDGE-4059
Microfiber Pad	N/A	EDGE-4036	EDGE-4060
Dominator HD Strip Pad	N/A	EDGE-4006	EDGE-4061
Maroon ECO Prep Pad	EDGE-2407	EDGE-4007	EDGE-4062
Remover Burnishing Pad	N/A	EDGE-4008	EDGE-4063
Porko Burnishing Pad	N/A	EDGE-4017	
Velcro Pad	N/A	300-4023	

SPORT COMMON WEAR PARTS



EDGE GRIP FACE:

DESCRIPTION	PART#
20", 24" & 28" Mighty Lok Grip Face	300-01037Z

V2.1 SQUEEGEE BLADE KITS & COMPLETE SQUEEGEE ASSEMBLIES:

SQUEEGEE SIZE	20" DISK DECKS	26" DISK DECKS	25" CYL. DECKS	20" EDGE DECKS	24" EDGE DECKS	28" EDGE DECKS
33" Squeegee	Standard	Standard	Standard	Standard	Standard	Standard
37" Squeegee	Optional	Optional	Optional	Optional	Optional	Optional

SQUEEGEE SIZE	LINATEX BLADE KIT	COMPLETE SQUEEGEE ASSEMBLIES
33" Squeegee	433-721L	233-2181
37" Squeegee	437-721L	237-2181

SQUEEGEE MATERIAL:	USED FOR:
LINATEX	Provides best wear and tear resistance. Not
LINAIEA	designed for use with harsh chemicals.

NOTICE

Squeegee blade kits include (1) Rear Blade, (1) Front Blade, and (2) Caster Wheels with hardware.

NOTICE

Squeegee Assemblies (complete) listed above all come with Linatex blades.





ROUND DISK BRUSHES:

The ## in Disk Column Denotes Desk Pad Size: 13" or 14"

BRUSHES	DISK	LEVEL
Super Grit	##-382SS	Very High
Tough Grit	##-382S	High
Midi Grit	##-382C	Medium
Light Grit	##-382PS	Moderate
Poly	##-382P	Light
Nylon	##-382N	Light
Tampico	##-382T	Light
Pad Driver	##-382D	
Diamond Driver	##-382DD	

ROUND DISK PADS:

NOTICE

The ## in Disk Column Denotes Desk Pad Size: 13" or 14"

DISK PADS	DISK	LEVEL	COLOR
Super Black	##-422BB	Very High	Black
Black	##-422B	High	Black
Brown	##-422BR	High	Brown
Green	##-422G	Medium	Green
Blue	##-422BL	Moderate	Blue
Red	##-422R	Moderate	Red
White	##-422W	Light	White

CYLINDRICAL BRUSHES:

BRUSHES	MODEL 25" CYLINDRICAL	MODEL 29" CYLINDRICAL	LEVEL
Tough Grit	236-697S	276-697S	High
Midi Grit	236-697C	276-697C	Medium
Light Grit	236-697PS	276-697PS	Moderate
Nylon	236-697N	276-697N	Light
Tampico	236-697T	276-697T	Light

EDGE PADS AND SCREENS:

DESCRIPTION	24"×14" SCRUBDECK	28"×14" SCRUBDECK
White Pad	N/A	EDGE-4054
Red Pad	EDGE-2404	EDGE-4053
Blue Pad	EDGE-2403	EDGE-4052
Green Pad	EDGE-2402	EDGE-4051
Black Pad	EDGE-2401	EDGE-4050
White Driver Pad	N/A	EDGE-4058
60 Grit Sand Screen	N/A	EDGE-4059
80 Grit Sand Screen	N/A	EDGE-4060
100 Grit Sand Screen	N/A	EDGE-4061
120 Grit Sand Screen	N/A	EDGE-4062
150 Grit Sand Screen	N/A	EDGE-4063
80 Grit Sand Paper	N/A	N/A
100 Grit Sand Paper	N/A	N/A
400 Grit Diamond Polishing Pad	N/A	EDGE-4013



800 Grit Diamond Polishing Pad	N/A	EDGE-4014
1500 Grit Diamond Polishing Pad	N/A	EDGE-4015
3000 Grit Diamond Polishing Pad	N/A	EDGE-4016
6000 Grit Diamond Polishing Pad	N/A	EDGE-4070
Tile/Grout Renovator Pad	N/A	EDGE-4048
Dominator HD Strip Pad	N/A	EDGE-4055
Maroon ECO Prep Pad	EDGE-2407	EDGE-4056

EDGE GRIP FACE:

DESCRIPTION	PART#
24"-28" Mighty Lok Grip Face	300-01037Z

V2.1 SQUEEGEE BLADE KITS & COMPLETE SQUEEGEE ASSEMBLIES:

SQUEEGEE SIZE	26" DISK DECKS	28" DISK DECKS	25" CYL. DECKS	29" CYL. DECKS	24" EDGE DECKS	28" EDGE DECKS
37" Squeegee	Standard	Standard	Standard	Standard	Standard	Standard
41" Squeegee	Optional	Optional	Optional	Optional	Optional	Optional

SQUEEGEE SIZE	LINATEX BLADE KIT	COMPLETE SQUEEGEE ASSEMBLIES
37" Squeegee	437-721L	37-2181
41" Squeegee	441-721L	41-2181


SQUEEGEE MATERIAL: USED FOR:	
LINATEX	Provides best wear and tear resistance. Not
	designed for use with harsh chemicals.

NOTICE

Squeegee blade kits include (1) Rear Blade, (1) Front Blade, and (2) Caster Wheels with hardware.

NOTICE

Squeegee Assemblies (complete) listed above all come with Linatex blades.

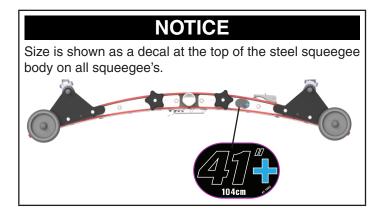



ROUND DISK BRUSHES:

NOTICE

The ## in Disk Column Denotes Desk Pad Size: 15", 16" or 17"

BRUSHES	DISK	LEVEL
Super Grit	##-382SS	Very High
Tough Grit	##-382S	High
Midi Grit	##-382C	Medium
Light Grit	##-382PS	Moderate
Poly	##-382P	Light
Nylon	##-382N	Light
Tampico	##-382T	Light
Pad Driver	##-382D	
Diamond Driver	##-382DD	

ROUND DISK PADS:

NOTICE

The ## in Disk Column Denotes Desk Pad Size: 15", 16" or 17"

DISK PADS	DISK	LEVEL	COLOR
Super Black	##-422BB	Very High	Black
Black	##-422B	High	Black
Brown	##-422BR	High	Brown
Green	##-422G	Medium	Green
Blue	##-422BL	Moderate	Blue
Red	##-422R	Moderate	Red
White	##-422W	Light	White

CYLINDRICAL BRUSHES:

BRUSHES	MODEL 29" CYLINDRICAL	MODEL 33" CYLINDRICAL	LEVEL
Tough Grit	276-697S	316-697S	High
Midi Grit	276-697C	316-697C	Medium
Light Grit	276-697PS	316-697PS	Moderate
Nylon	276-697N	316-697N	Light
Tampico	276-697T	316-697T	Light

EDGE PADS AND SCREENS:

DESCRIPTION	28"×14" SCRUBDECK	32"×14" SCRUBDECK
White Pad	EDGE-4054	EDGE-5005
Red Pad	EDGE-4053	EDGE-5004
Blue Pad	EDGE-4052	EDGE-5009
Green Pad	EDGE-4051	EDGE-5002
Black Pad	EDGE-4050	EDGE-5001
White Driver Pad	EDGE-4058	N/A
60 Grit Sand Screen	EDGE-4059	N/A
80 Grit Sand Screen	EDGE-4060	N/A
100 Grit Sand Screen	EDGE-4061	EDGE-5028
120 Grit Sand Screen	EDGE-4062	EDGE-5029
150 Grit Sand Screen	EDGE-4063	N/A
Tile/Grout Renovator Pad	EDGE-4048	N/A
Dominator HD Strip Pad	EDGE-4055	N/A
Maroon ECO Prep Pad	EDGE-4056	EDGE-5007
Remover Burnishing Pad	EDGE-4057	EDGE-5008
Porko Burnishing Pad	EDGE-4047	N / A
Velcro Pad	300-4024	N / A

EDGE GRIP FACE:



DESCRIPTION	PART#
28"-32" Mighty Lok Grip Face	300-01037Z

V2.1 SQUEEGEE BLADE KITS & COMPLETE SQUEEGEE ASSEMBLIES:

SQUEEGEE SIZE	30" DISK DECKS	34" DISK DECKS	29" CYL. DECKS	33" CYL. DECKS	28" EDGE DECKS	32" EDGE DECKS
41" Squeegee	Standard	Optional	Standard	Optional	Standard	Optional
45" Squeegee	Optional	Standard	Optional	Standard	Optional	Standard

SQUEEGEE SIZE	LINATEX BLADE KIT	COMPLETE SQUEEGEE ASSEMBLIES
41" Squeegee	441-721L	41-2181
45" Squeegee	445-721L	45-2181

SQUEEGEE MATERIAL:	USED FOR:	
LINATEX	Provides best wear and tear resistance. Not designed for use with harsh chemicals.	

NOTICE

Squeegee blade kits include (1) Rear Blade, (1) Front Blade, and (2) Caster Wheels with hardware.


NOTICE


Squeegee Assemblies (complete) listed above all come with Linatex blades.

NOTICE Size is shown as a decal at the top of the steel squeegee body on all squeegee's.

MACHINE DECALS

Central Command Decals

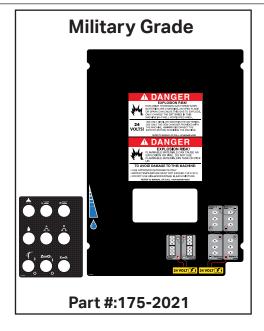

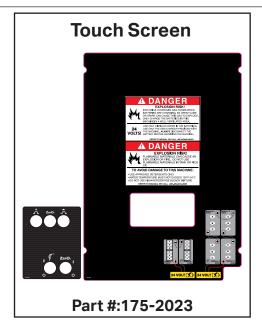

Models / Options / Squeegee Size Decals



Part #:164-1516



Part #:370-7216



Part #:175-1516



Part #370-7217



Part #:264-1516



Part #:370-7220



Part #:33-1602



Part #:37-1602



Part #:41-1602



Part #:45-1602





Part #:123-1837



Part #:123-1838



Part #:123-1843





1711 South Street Racine, WI 53404 www.tomcatequip.com 1-262-681-6470